

Garmin Zumo Audible User Guide



Requirements & Tech Specs

- **Only** Win XP with SP 2 or Vista
- Windows Media Player 11.
- **Audible Formats:** 2 3 4
- **Bookmarking:** Yes
- **Section Navigation:** Yes
- **Variable Playback Speed:** No
- **FM Radio:** No
- **Video:** No
- **Removable Battery:** No

How To's:

A. **Playback:** How do I locate/play Audible content on the Insignia Pilot?

Step 1. From the main screen, click on the **Music Note** button at the bottom of the screen.

Step 2. Press on **Audible Book Player**

Step 3. Press **Browse** and then **All** (on the player screen) to view the Audible content on the device.

B. **Rewind/Fast-Forward:** How do I rewind/fast-forward through my Audible content on the device?

1. **Rewinding:** Press and hold the **Rewind** button.
2. **Fast-Forwarding:** Press and hold the **Fast-Forward** button.

C. **Bookmarking:** How do I bookmark on the device?

1. **Setting a bookmark:**

- a. While the player is open and the title is playing or paused on the device, press the **Set Bookmark** button (shown above).
- b. Then press the **Bookmark** button to save the bookmark.
- c. Press the **Back** button to go to the main player screen.

2. **Going to a bookmark:**

- a. While the player is open and the title is playing or paused on the device, press the **Goto Bookmark** button (shown above)
- b. Press on the desired bookmark from the list.
- c. Press on the large green **Play** button.

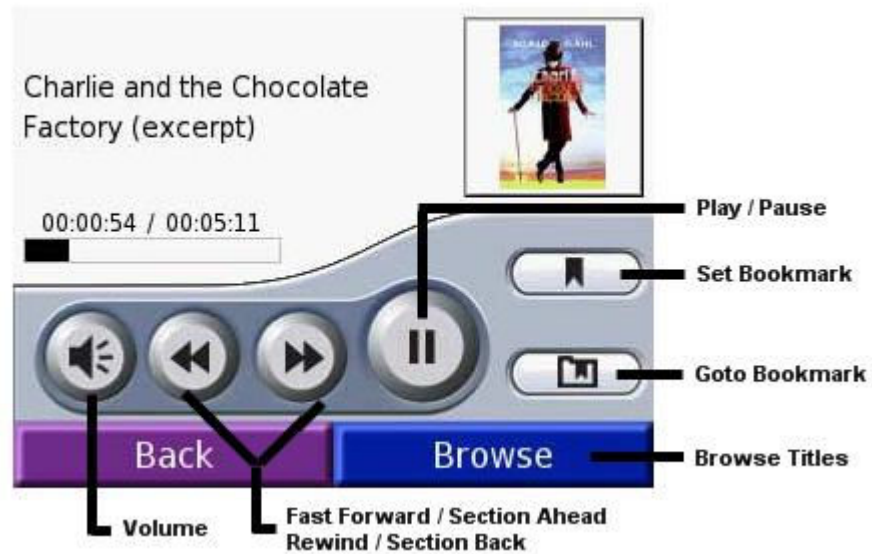
3. **Removing a bookmark:**






- a. While the player is open and the title is playing or paused on the device, press the **Goto Bookmark** button (shown above)
- b. Press on the desired bookmark, to be removed, from the list.
- c. Press the **Edit...** button in the lower right corner.
- d. Press the **Delete** button.
- e. When prompted with **Delete this Bookmark?** Press **Yes**

D. **Section Navigation:** How do I use section navigation?

Simply pressing the **Fast Forward** or **Rewind** buttons once will navigate to the next or previous section within the title

Buttons & Functions



- A.  Power button
- B.  Zoom in, raise volume, or increase brightness.
- C.  Zoom out, lower volume, or decrease brightness.
- D.  Page button—scroll through the Map, Compass, Trip Information, Media Player, and Phone Menu pages. Press and hold to adjust brightness.
- E.  Speak button—press to adjust volume level. Press and hold to announce voice directions.

